



Installation Instruction:

1. Push groove and make the light out
2. Screw out the screw inside and remove rear box
3. Fix the rear box into cutout hole
4. Connect the wire correctly to power
5. Fix back the light body and screw

**Caution !**

Input: 110V-265V,50/60Hz

1. Power must be off before installation.
2. Installation/Repair only by authorised persons.

